



Model PS-10749-S Display System Installation Instructions

Thanks for purchasing this PinScore Model PS-10749-S Display System.

This model fits the following Williams puck **shuffle alley** machines:

STRIKE ZONE SHUFFLE
ALLEY CATS SHUFFLE

GOLD MINE SHUFFLE
TOP DAWG SHUFFLE

SHUFFLE INN
SHUFFLE INN DELUXE

FEATURES: Plug & play installation, long life, low voltage, low power consumption, adjustable brightness, diagnostic pushbutton, attractive black matte finish, 5 year warranty, RoHS compliant, built in USA.

INSTALLATION TIME: About 20 minutes

TOOLS REQUIRED: 1/4" Nutdriver

CONTENTS: This system contains:

Quantity (1) PS-10749 PinScore Master Driver Board

Quantity (6) PS-8364-S PinScore 4 digit LED Display Board

Quantity (1) PS-8365 PinScore 4 digit LED Display Board

Quantity (1) PS-LS-6 Foam light shield for PS-8365 Credit/Ball Display

Quantity (6) PS-LS-4 Foam light shield for PS-8364 Score Displays

INSTALLATION:

1. **CAUTION:** This PS-10749-S Display System CANNOT be used with any original display or driver boards. Damage to both new and old boards will occur if the systems are mixed. Please remove all original boards and install only these new boards.
2. **Unplug** the AC power from your pinball machine. Remove game backglass. Unscrew and remove all original glass displays, master driver board and all inter-board connecting cables.
3. **Mount** all new boards in their respective locations and only hand tighten the mounting screws. You may slide the LED display boards horizontally to adjust their positions for alignment with your backglass windows. If not already mounted, place the foam light shields on their respective LED display boards.
4. **Connect** the cables. You may re-use existing cables or optionally purchase new ones. Observe correct polarity on all ribbon cables - the red striped wires on all ribbon cables go to PIN #1 (also labeled RED) on all boards. Verify that jumper JP1 (used for shuffle games) is installed on PS-10749 Master Driver board.
5. **Double-check** all connections, plug in the machine, and turn the game on. The LED's will light up. Pressing the **DIAGNOSTIC** pushbutton on the Master Driver board will illuminate all segments of all displays. This indicates that all boards and cables in the PinScore System are operating correctly. Use the thumbwheel **BRIGHTNESS** control on the Master Driver board to set your preferred illumination level.
6. **START SLIDING!** You'll enjoy your PinScore Displays for years to come!

Support ONLINE: www.pinscore.com