



Model PS-8363-P Display System Installation Instructions

Thanks for purchasing this PINSCORE Model PS-8363P Display System.

This model fits the following Williams pinball machines:

ALGAR	FIREPOWER II	STAR LIGHT	COMET*
ALIEN POKER	JUNGLE LORD	TIME FANTASY	*These games may require a
BARRACORA	LASER CUE	WARLOK	different PINSCORE model
BLACK KNIGHT	PHAROAH	SPACE SHUTTLE*	depending upon your original
COSMIC GUNFIGHT	SOLAR KING	SORCERER*	part #.

FEATURES: Plug & play installation, long life, low voltage, low power consumption, adjustable brightness, diagnostic pushbutton, attractive black matte finish, 5 year warranty, RoHS compliant, built in USA.

INSTALLATION TIME: About 15 minutes

TOOLS REQUIRED: 1/4" Nutdriver

CONTENTS: This box contains:

Quantity (1) PS-8363 PINSCORE Master Driver Board

Quantity (4) PS-8364 PINSCORE 7 digit LED Display Board

Quantity (1) PS-8365 PINSCORE 4 digit LED Display Board

Quantity (1) PS-LS-6 Foam light shield for 4 or 6 digit Display Board

Quantity (4) PS-LS-7 Foam light shield for 7 digit Display Board

INSTALLATION:

1. **CAUTION:** This PS-8363-P Display System CANNOT be used with any original display or driver boards. Damage to both new and old boards will occur if the systems are mixed. Please remove all original boards and install only these new boards.
2. **Unplug** the AC power from your pinball machine. Remove game backglass. Unscrew and remove all original glass displays, master driver board and all inter-board connecting cables.
3. **Mount** all new boards in their respective locations and only hand tighten the mounting screws. You may slide the LED display boards horizontally to adjust their positions for alignment with your backglass windows. If not already in place, place the foam light shields on their respective LED display boards.
4. **Connect** the cables. Observe correct polarity on all ribbon cables - the red striped wires on all ribbon cables go to PIN #1 on all boards.
5. **Double-check** all connections, plug in the machine, and turn the game on. The LED's will light up. Pressing the DIAGNOSTIC pushbutton on the Master Driver board will illuminate all segments of all displays. This indicates that all boards and cables in the PINSCORE System are operating correctly. Use the thumbwheel BRIGHTNESS control on the Master Driver board to set your preferred illumination level.
6. **PLAY PINBALL!** You'll enjoy your PINSCORE Displays for years to come!

Support ONLINE: www.pinscore.com